

Xiaomi-rus

Руководство по эксплуатации
Пистолет для мойки высокого давления
Xiaomi Jimmy Wireless Washing Gun JW31



Wipe the appliance with a clean dry cloth if it becomes dirty. Do not use water, petrol or alcohol to clean it.

Keep the appliance out of reach of children when it is energized.

Clean hose connector filter and hose filter regularly.


When power cord is damaged, to avoid danger, send it to professional agent to replace.

Remove or disconnect the battery pack after use and before carry out user maintenance on the appliance.

Appliance assembly

1. Install battery pack: Take out battery pack, aim at the slot under machine handle, slide in until battery pack is locked.

Note: Keep battery pack away from water during assembly.

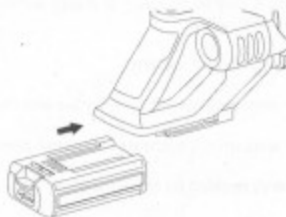


2. Install multi-spray nozzle and extension lance.

Note: The appliance is equipped with multi-spray nozzle and extension lance for different use.


2-1: Install multi-spray nozzle

Insert the multi-spray nozzle in to the power nozzle connector and press it tightly as pic ① and rotate multi-spray nozzle in the direction of pic ② until it is locked.

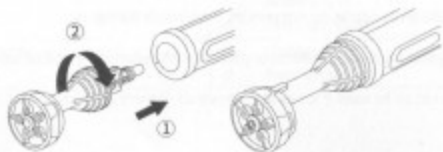


2-2: Install extension lance.


Insert extension lance into power nozzle connector and press it tightly as pic ①, and rotate extension lance in the direction of pic ② until it is locked.

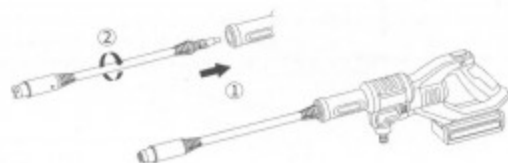

3-1: Install hose. Hold hose connector and insert into hose adapter until a "click" sound is

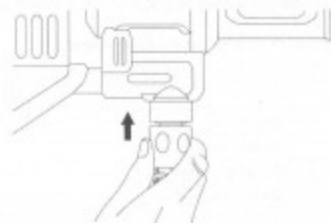


3-2: Disconnect hose: Hold hose connector, pull it away from hose adaptor.

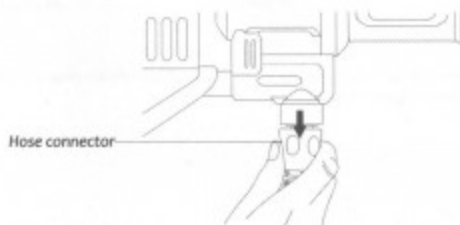

Product Operation

1.Charging

Before using the appliance, press battery pack power indicator to check power condition.

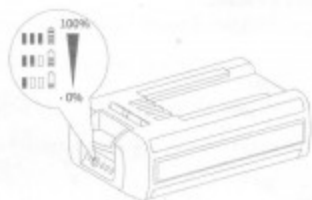


if there is not enough power, charge battery pack only with the charger that is specified for this equipment.

1)Align the charger adaptor with the battery pack slot and slide in until is locked. Start charging the battery pack.

Note: Check charging indicator colour to confirm charging status.

Indicator colour	Status
Red light on	Under charging
Green light on	Charging completed
Red light blinks	Battery has problem

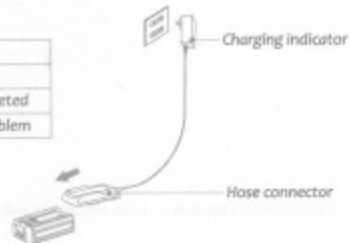

2)After charging is completed, remove charger from power socket. Press battery pack release button and remove battery pack from charger adaptor.



Note:

- ① Battery pack is not full for the first use of the equipment. Please charge the battery pack before using.
- ② Charge pack is not waterproof, charge the battery pack in dry place. The charging time takes around 1.5 Hours.
- ③ During use of the equipment, when machine indicator blinks, it means there is not enough power. Charge the battery pack immediately.
- ④When there is not enough power, to protect the battery pack, equipment will turn off automatically.

2.Operation

2-1: Setting option


This equipment has two pressure mode: ECO setting and MAX mode. Press pressure mode button to switch mode.

Pressure setting indicator is on, the equipment is in ECO mode, if the indicator is off, the equipment is in MAX mode.



Suggest to use MAX mode in the starting and change to ECO mode when water spray is normal.

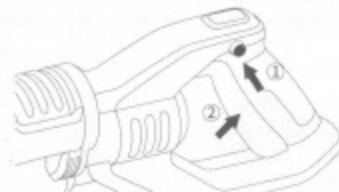

2-2: Start using: Press lock off switch (pic①), then press on/off switch lever to start using the equipment.



2-3: Choose water spray pattern:

Multi-spray nozzle: There are 5 spray pattern: 0°、15°、25°、40°and  , please choose a suitable nozzle pattern according to your work. And the spray pattern with the symbol  is best suitable for watering or showering. Rotate the nozzle ring to choose suitable spray pattern.


Note:

- ① Do not shift the nozzle pattern when the tool is powered on. Turn off the equipment and choose the pattern and then turn on again.
- ② Do not target the nozzle at self or other person during use.




Extension lance: Extension lance can spray water in strict pattern or fan-shaped pattern. Rotate the ring in top of extension lance to choose suitable spray pattern.

Note: Do not target the nozzle at self or other person during use.

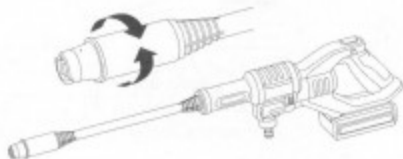

2-4: Use of soap bottle:

Soap bottle provides detergent suds for deeper cleaning of dirt. It is used in conjunction with power nozzle or extension lance. Connect soap bottle as below picture and turn on the equipment to spray soap bubbles to washing target. Soap quantity can be adjusted by rotating the knob on top of soap bottle.

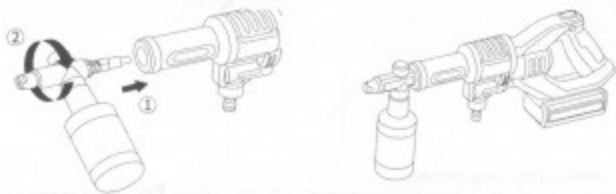

2-5: Functions:

 
The equipment can be used for different function: Washing cars, bikes, road, grass, barbecue oven and watering flower etc...




3: Product cleaning and maintenance

Note: Remove battery before cleaning the equipment.

3-1: Cleaning hose adaptor filters regularly to avoid blocking water inlet. Use wrench to disconnect hose adaptor and remove filter to clean it.

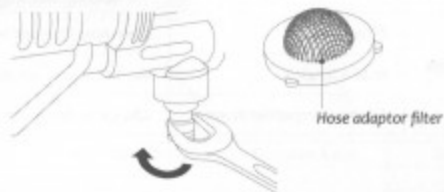

 - 3-2. Clean hose filter regularly to avoid blocking hose inlet.
 Rotate hose filter cover to detach from hose, take out the hose filter and clean it.

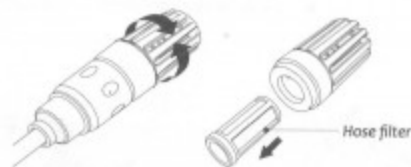

- 4.Storage.
 Before storage, completely drain all the water from the machine and hose. Remove battery pack and multi-spray nozzle/extension lance and hose.

Note:

- ①Store battery pack separately in dry place. Do not store it in car or hot place.
 ②Store the equipment in dry place out of the reach of children.

Trouble Shooting

Symptom	Possible cause	Solution
ECO light blinks	Battery pack is empty	Recharge the battery pack
Machine does not start	Battery pack is empty	Recharge the battery pack
Machine stops automatically	Machine temperature is too high	Turn off machine and wait until the machine is cooled down to turn it on
Battery pack cannot charge	Battery pack is not inserted in charging connector completely	Reinstall battery pack into charge connector
	Charge is not plugged on	Make sure charged is plugged on and the indicator on charger is on
Machine sprays little water	Filter is blocked	Clean hose filter and hose adaptor filter
	Hose is tangled	Replace hose or straighten out the hose
	Too much impurities in water	Change to clean water

Trouble Shooting

Machine does not draw any water	Hose adapter looses	Tighten the hose adapter
	not well connected to the machine	Tighten the hose adapter securely
	Hose filter is not completely inserted into water	Insert hose filter into water completely
Machine takes long time to draw water	Machine is in ECO mode	Switch to MAX mode
Multi-spray nozzle connector leaking water	Multi-spray nozzle looses	Insert multi-spray nozzle to the end and rotate it to fix
Multi-spray nozzle leaking water	Multi-spray nozzle is not rotated to right position	Rotate the multi-spray nozzle until the water shape mark is align with arrow

Technical Data

Model	JW31	
Charger voltage	100V-240V ~ 50/60Hz	
Charging current	1000 mA	
Charging time	Around 2.5h	
Voltage	20V Max ---	
Pressure	Max mode	2.2MPa
	Eco mode	0.8MPa
Max. water flow rate	3L/min	
Max. inlet water pressure	0.5MPa	
Suction height	Max 1.8m	
Machine weight(with battery)	1.8kg	

Packing list

Hose	Multi-spray nozzle	Extension lance	Soap bottle
1	1	1	1
Carry bag	Battery Pack	Charger	Cleaner
1	1	1	1